

---

## 7261 AXION MSR™

### EYE / FACE WASH STATION

Free standing / pedestal

✓	1/2"G
^	1 1/4"G
⚖	8,4 kg
♿	No
S	CH
Z	Z535.1

- **Free standing pedestal**
- AXION MSR™ eye / facewash head (SP65)
- 11" catch basin made of **ABS plastic** (SP93)
- Strainer (SP509)
- Floor flange (SP75)
- Eye wash sign (SP175)
- Test tag (SP170)
- Foot control assembly (SP220)
- Stainless steel push flag with stay open ball valve (SP229)
- Axion flow control (SP37.5)



---


**PNR UK Ltd**

28a Harris Business Park, Stoke Prior, Bromsgrove, B60 4DJ

[www.pnr.co.uk](http://www.pnr.co.uk) | [spraynozzles@pnr.co.uk](mailto:spraynozzles@pnr.co.uk) | +44(0)1527 579 066

Co. Reg. 2306776

V.A.T. Reg. No. 488 0643 16

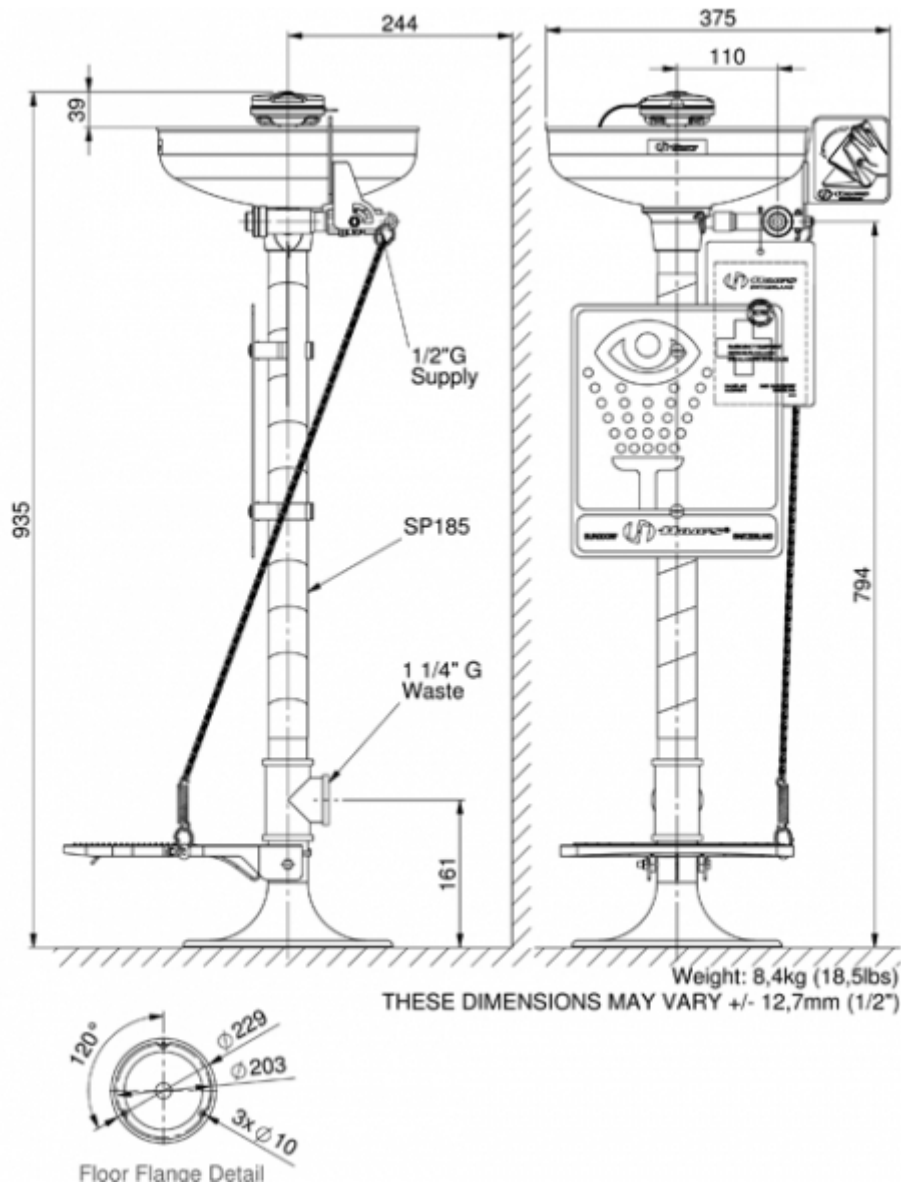

### PNR UK Ltd

28a Harris Business Park, Stoke Prior, Bromsgrove, B60 4DJ

[www.pnr.co.uk](http://www.pnr.co.uk) | [spraynozzles@pnr.co.uk](mailto:spraynozzles@pnr.co.uk) | +44(0)1527 579 066


Co. Reg. 2306776

V.A.T. Reg. No. 488 0643 16

## Model 7261 Axion Pedestal Eye Wash

No.2080043/4

**NOTE TO INSTALLER:** please leave this information with the maintenance department.

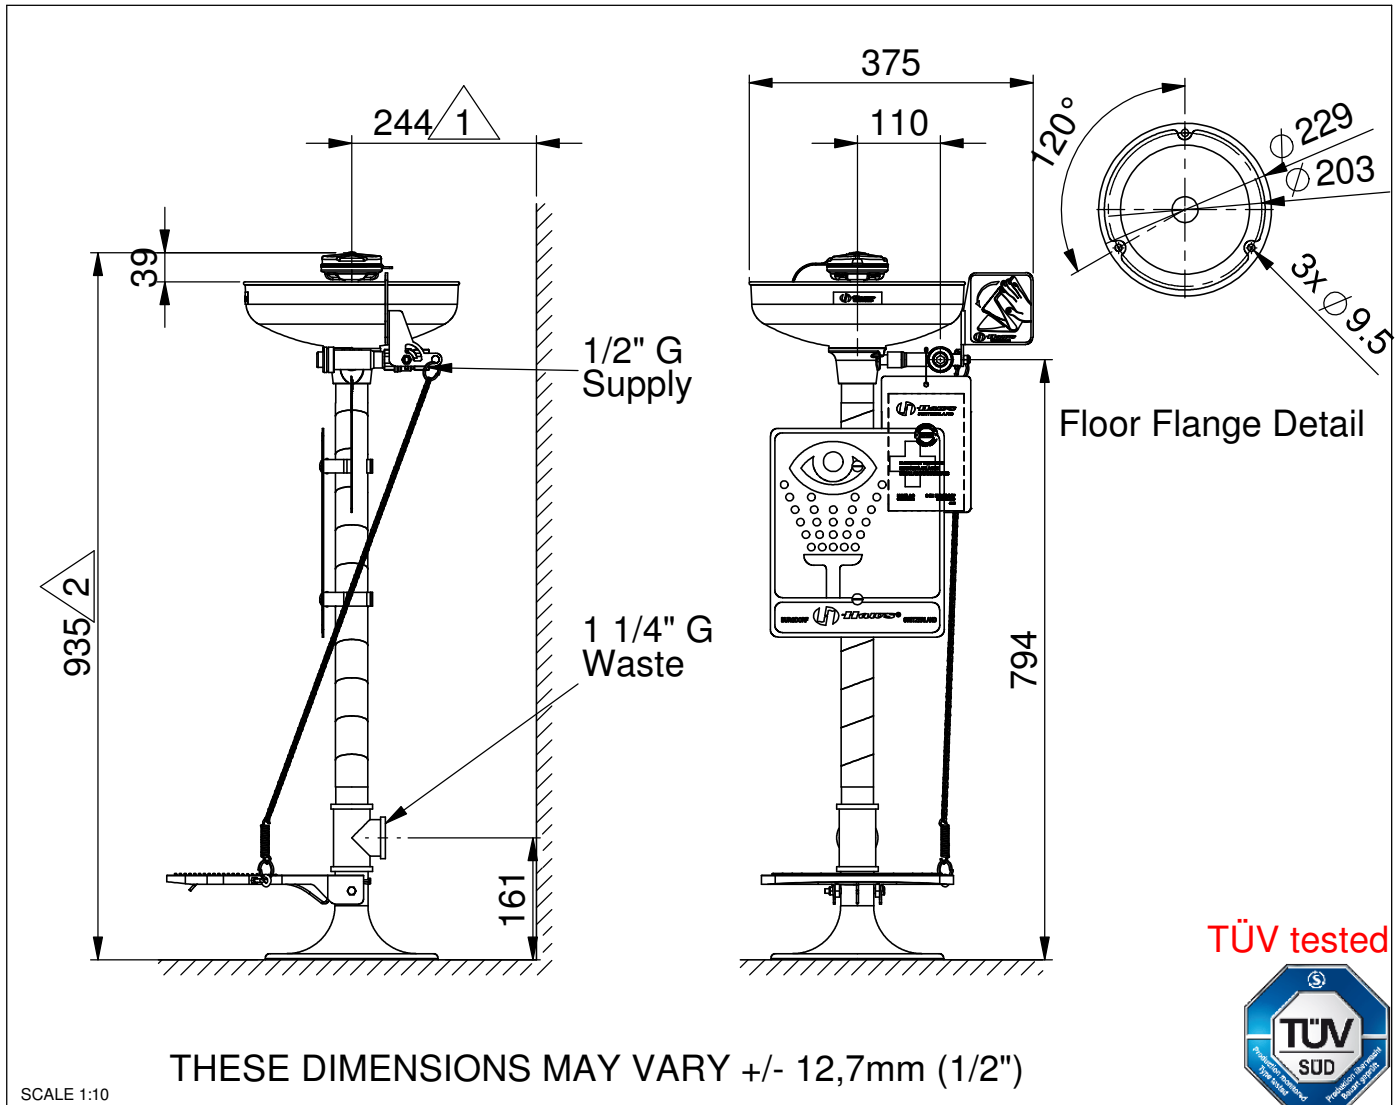

### Legally-stipulated dimensions:

- 1 Ensure that there is a minimum clearance of 150mm (6") with respect to the nearest wall or obstacle.
- 2 Height above floor level: 800mm - 1200mm (2' 7 1/2" - 3' 11 1/4").

Free access to the eyewash station 7261 Axion must be guaranteed all times. The operator is responsible for the observance of this requirement.



## Model 7261 Axion Pedestal Eye Wash

No.2080043/4

**Shower location:** The eyewash station 7261 Axion must be installed in the vicinity of potential danger zones. It must be highly visible and easily accessible.

**Connection conduit:** You are recommended to use a 1/2" G conduit, capable of withstanding pressures of 2 - 6 BAR (30 - 90 PSI). The use of an inlet filter designed to prevent the entry of suspended particles and other impurities is also recommended.

**Water quality:** Eyewash stations require a supply of drinking water conforming to European standards or their equivalents in other countries.

**Water temperature:** The required water temperature should be determined by the user. The accepted ideal range is 15 - 35°C / 60 -95°F (but please ensure conformity with local regulations).

**Volume flow:** A minimum flow rate of 6 litres / 1,6 US gallons per minute must be maintained. The eyewash station must be capable of delivering this amount of water for at least 15 minutes.

**Connection to plumbing system:** The inlet consists of a 1/2" G conduit with female-thread adapter, while the outlet is a 1 1/4" G threaded conduit.


### Regular inspection:

The eyewash station 7261 Axion should be inspected at weekly intervals. The inspection tag should be dated and signed after each check.

### TROUBLESHOOTING



Problem	Repair-checklist
1. No flow	Check the main shutoff valve.
2. Insufficient flow of water	<ol style="list-style-type: none"><li>1. Check the line pressure. This should be at least 2 BAR / 30 PSI (dynamic).</li><li>2. Blocked flow, possibly due to the conduit not being correctly flushed out. Dismantle the T-piece, and clean the rubber flow-regulator.</li></ol>
3. Flow rate is not as specified	The flow conduit may be blocked (for remedy see above). The eyewash station may not have been set up correctly.
4. Water does not discharge correctly	Check the building's main drainage outlet. Note that it must have adequate capacity to handle the entire drainage system.

# PARTS BREAKDOWN

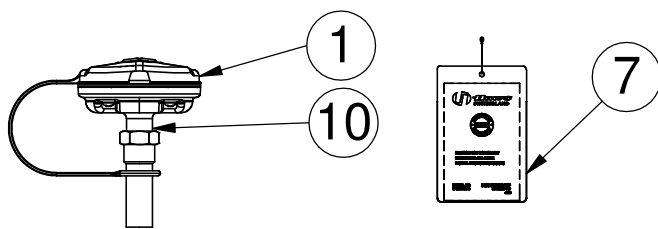

SP65 EYE WASH ASSEMBLY

ITEM	PART NU.	DESCRIPTION
1	SP65	Axion eye/face wash head
2	SP93	Bowl
3	SP509	Strainer
4	SP75	Floor flange
5	SP229	Valve assembly
6	SP175	Eye wash sign
7	SP170	Test tag
8	SP220	Foot control assembly
9	SP185	Stripe tape
10	SP37.5	Flow control

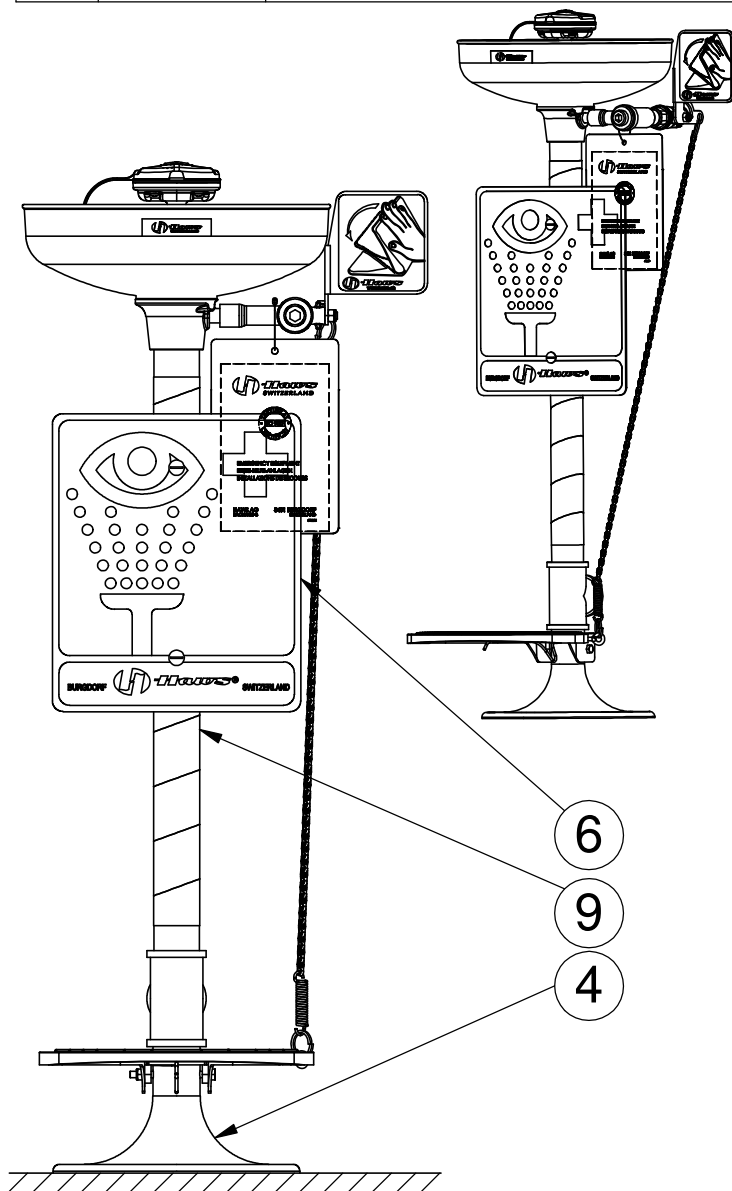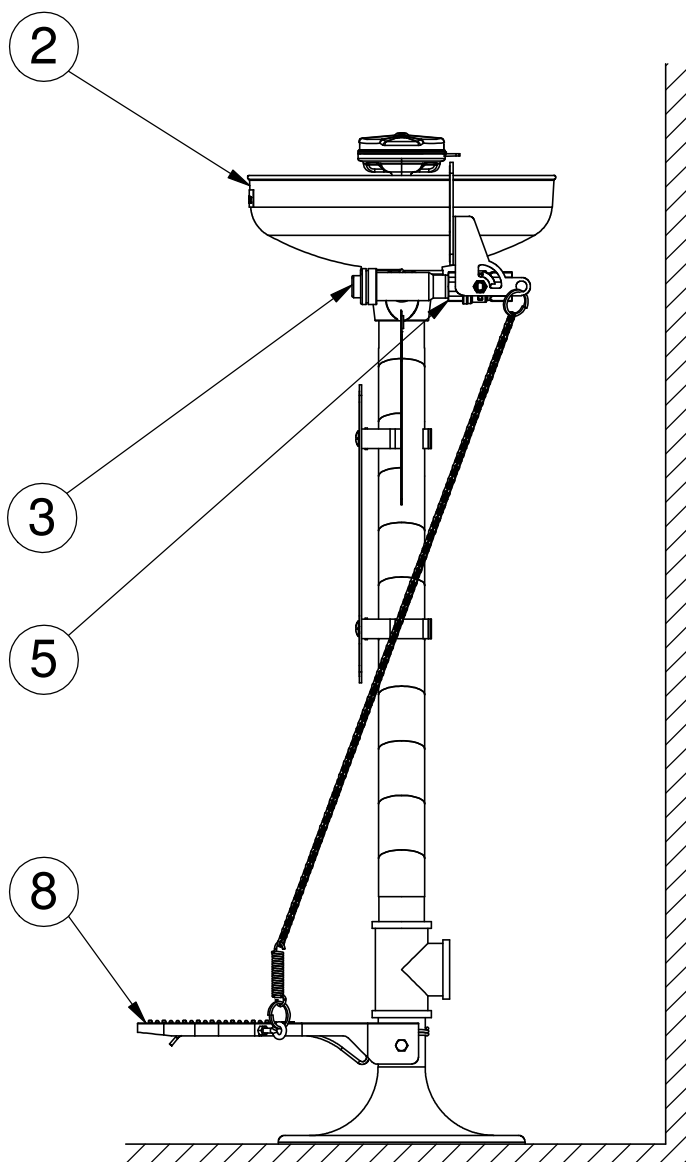

TÜV tested



## PARTS BREAKDOWN

**WHEN ORDERING PARTS PLEASE SPECIFY YOUR MODEL NUMBER**

APPROVALS	DATE
DRAWN Jeannine Ruf	02.10.2007
CHECKED	
REVISED	30.09.2011
DRAW-NO.	
ECN NO.	



T +41 (0)34 420 60 00  
F +41 (0)34 420 60 01  
BACHWEG 3  
CH3401 BURGDORF  
SWITZERLAND  
www.haws.ch  
info@haws.ch

TITLE  
7261 Axion  
Pedestal Eye Wash

MATERIAL

SIZE PART NO.  
A4 2080043/4

SCALE 1:7

SHEET 4 OF 4

ZONE	REV	DESCRIPTION	ECN	DATE	BY
REVISIONS					
THIS DOCUMENT AND THE DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED, USED, OR DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT THE PERMISSION OF HAWS CORPORATION.					